


HOW TO ENABLE L2C AND L5 IN ARM SERIES


Software: Hcconfig V1.1.0.1243

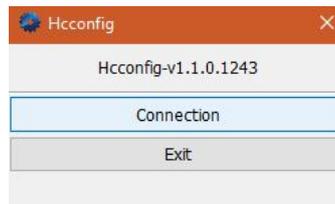

X91/900+ firmware: 8.35

Operating:


1. Hook up a serial cable to receiver and PC;
2. Run Hcconfig and connect to the receiver in correct COM port and baud rate;

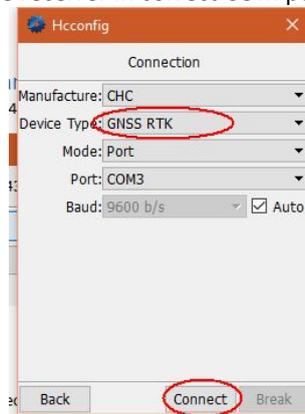

3. Go to Device Info;



4. Click Track on the bottom of the UI then click OK to open all the frequency and channel;

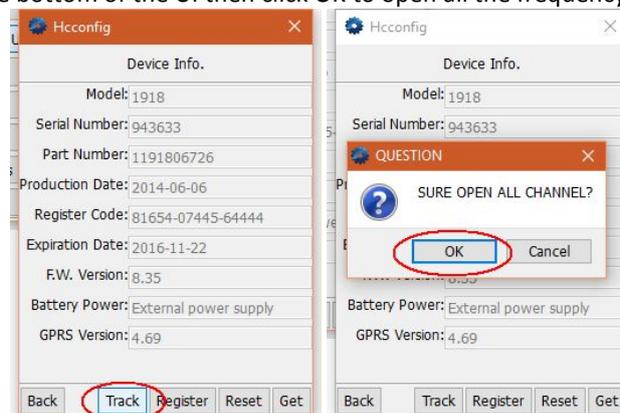

HOW TO ENABLE L2C AND L5 IN ARM SERIES

5. Wait for 5 second until it is possible to click Back button to exit the current interface;
6. Power off then power on, receiver will keep the option enable until manually disable it from the BD970 web UI.

Any other questions please send email to support@chcnv.com or contact us online via Skype. Our Skype ID is chc_support.

Last reviewed on Oct 26, 2016.